


# K-Kraft Super Winder

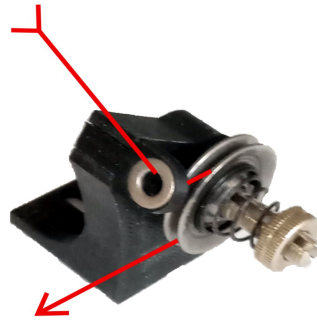

## Threading


- ♦ From the top of the cone - up through the loop in the stand (An included thread net can be used for a smoother wind ).
- ♦ Through the eyelet and around the back of the tension disks \* Be sure to pull the thread snugly between the disks \*
- ♦ Attach thread to bobbin ( turns CW so thread will wind to bottom of bobbin ).



### Bobbin

Some bobbins have a larger hole on one side than the other. If so, the larger hole goes to the inside.

Make sure the bobbin is touching the spindle shoulder.

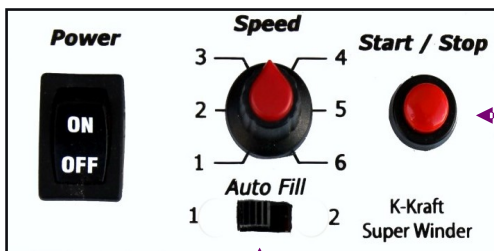

Push button starts the motor if it is stopped and stops the motor if it is running.

- Normal operation is a short press and release of the button.
- When starting, holding the button down for 5 seconds or longer initiates a new setting for the Auto Fill.

Auto Fill stops the motor after a preset number of revolutions. There are 2 choices, allowing for the use of 2 different size bobbins. The settings can be easily changed and will be retained until there is a new setting. Auto fill is always active, initially we set it very high so you will want to set it for your bobbin.

### Setting

With the bobbin mounted ,threaded and power on.

- \* Select either 1 or 2.
- \* Press and hold Start / Stop button for 5 seconds or longer then release.
- \* Allow the bobbin to wind until it is full.
- \* Press Start / Stop button again to stop.

The Auto fill is now set for that bobbin. You may select other switch position and repeat the procedure for another size bobbin.

Settings can be changed at any time by repeating the procedure.

After the Auto fill is set, normal operation would be: 1. Push the empty bobbin onto the spindle. 2. Attach the thread to the bobbin. (winds to the bottom of the bobbin) 3. A short press of the button. The bobbin will start winding at whatever speed you have set. When the bobbin is nearly full it will slow down for the last few turns and stop.